

Replacing LX REMOTE STICK keyboard pad for LX8000

STEP 1 : Remove 2 black screws on top



STEP 2 : Remove front plate and old rubber pad



STEP 3 : Remove inner metal plate



STEP 4 : Insert NEW pad (without metal plate)



STEP 5 : Insert front plate



STEP 6 : Screw the front plate with 2 black screws

